

KeyMinder® KM5 Key Safe

How to reset the combination code:

1. Push down the shield covering the combination pad
1. Open using the factory preset "0-0-0-0" pincode and pull down lever (**Fig.1**) to the left of a combination rolls to open
3. On the upper inside of the now open door, locate the silver lever with "RESET" marked next to it. You will notice the lever is in position "A"
4. Move the code reset lever from position "A" to position "B" by sliding it to the left, then downwards as shown in **Fig. 2**
5. Rotate the 4-dials on the front to your new pincode. Ensure the numbers are positioned centrally and have clicked into position. Memorise and record the new pincode for future reference and keep it safe
5. Return the reset lever, inside the box, to the original position (up and to the right, in the opposite direction of arrow shown in **Fig. 2**)
7. Close the door. To lock the box the combination must be scrambled by rotating the 4-dials
8. Check the operation of the lock box using the new pincode

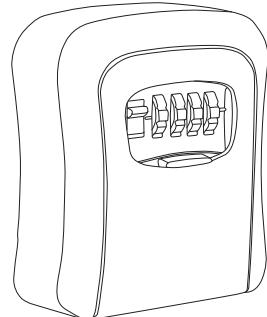


Fig. 1



Fig. 2



User instructions:

Insert keys (objects) into storage area of box, close the storage lid and scramble the dials to lock.

Fitting instructions:

The box should be mounted on to a solid wall using all holes on the back plate. Screws should be tight without distorting the back plate. Wall plugs should be used for masonry and brick walls.

Note: It is recommended to reset the pin before mounting to a wall.

Choosing the right position to fit:

KeyMinder® should be mounted in a discreet location for maximum protection and in an area with sufficient light for authorised users to see the dials. Key safes can be used indoors and outdoors.